 




The Dry Extraction  
Cleaning System

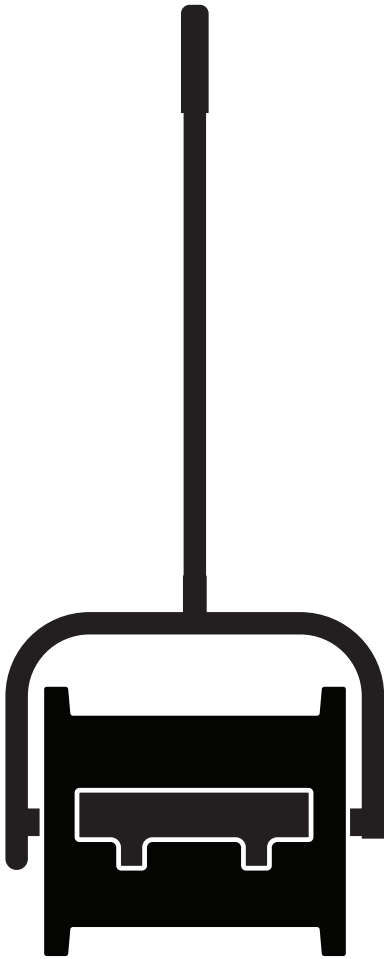

## **HA3 - APPLICATOR**

**INSTRUCTION MANUAL AND  
REPAIR PARTS CATALOG  
NO. L8023F**

**For Machines starting  
with Serial No. HB1001  
Issued July, 2004**

### **ORDERS**

Please use part numbers when ordering and include the serial number of the Applicator to insure that you receive the correct parts. Order from your HOST Distributor.


# Use and Upkeep Instructions

Control costs by using the HOST® Applicator. The three applicator settings, light, medium or heavy, take the guesswork out of applying HOST Cleaner. Load the applicator (up to 12 pounds), open to the desired setting and apply. The uniform piles of HOST Cleaner will not dry out quickly. Spread up to 500 square feet at a time before brushing with the HOST Liberator®, Freestyle® or Reliant™.

## Filling the Applicator

Be sure the hole covers are closed **before** filling the applicator. Attach the handle by screwing it into the crossbar.

1. Unscrew the 2 knobs on the fill port cover and remove the cover. Set aside.
2. Fill the applicator with 12 lbs. (5.4 kg.) of HOST Cleaner.

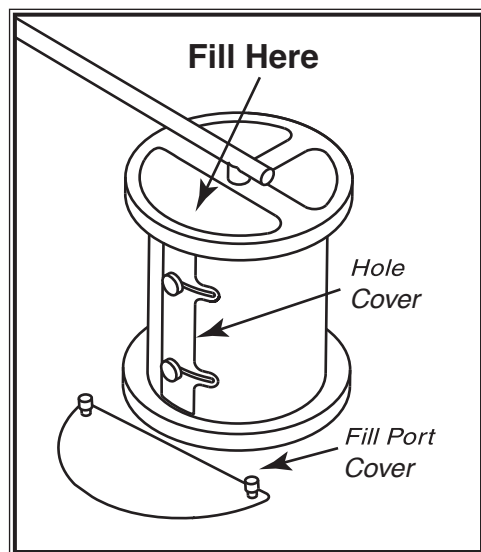


3. Replace the fill port cover and tighten the knobs.

## Applying HOST Cleaner to the Carpet

To uncover holes for HOST Cleaner application, loosen both screw knobs on the hole cover(s) and slide the cover(s) open until the holes are visible.

**Light soil:** slide one hole cover open.

**Medium soil:** slide two hole covers open. **Heavy soil:** slide three hole covers open.

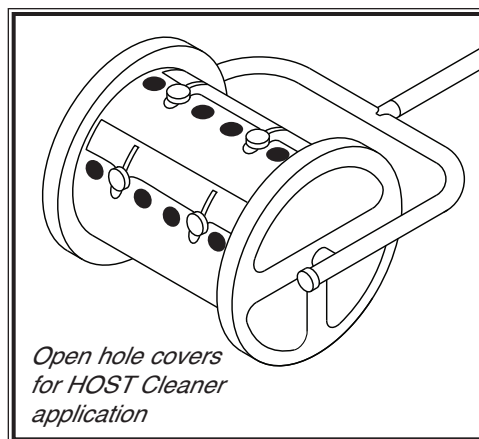

Slide one, two or three hole covers open to dispense HOST Cleaner.

The most cost efficient way to use your HOST Applicator is to select the setting for the lightest, average degree of soil for your cleaning job. For example, if the area to be cleaned is lightly soiled but with a few bad spots or visible traffic lanes, set applicator on "Light" and use more cleaner on more heavily soiled areas using the following tips:

1. **Traffic lanes** - walk the applicator over the traffic lanes first; then apply as usual to the entire area including the traffic lanes for the second time. This will apply extra HOST Cleaner where it is needed.
2. **Severe spots** - push the applicator back and forth over the spot.
3. **Funnel areas** - treat heavier soil in doorways and other funnel areas by giving an extra push-pull motion where more soil is visible.
4. When using the applicator, walk at a slow pace. Less cleaner is dispensed when you walk fast. This may affect cleaning results.

The heavy setting should be used only on **extremely** soiled carpets. On residential carpets, use the next higher setting, because of the thicker pile. If some areas do not come clean, reapply. On very heavily soiled carpet, be careful not to allow the piles of cleaner to stand too long before brushing. Clean "dots" may result which will be difficult to blend.

**Note:** If carpet seems soiled after cleaning, you may need to reapply and brush again.

## HOST Cleaner Coverage

You can expect the following coverage rates with the applicator:

### HOST Cleaner Coverage

Light (1 cover open)	96 sq. ft./lb. 19 m²/kg
Medium (2 covers open)	64 sq. ft./lb. 13 m²/kg
Heavy (3 covers open)	32 sq. ft./lb. 7 m²/kg

These figures are averages which will help you plan how many boxes of cleaner will be needed per job.

**NOTE:** Some HA3 components are plastic and could become distorted in extreme temperature conditions.

**To prolong the life of the HA3, store in an area with proper ventilation to avoid excessive heat build-up.**

# HA3 HOST® Applicator

## Parts List

	Code No.	Part No.	Description
	1	L8003	Handgrip
	2	L8000	Handle Assembly
	3	L8004	Crossbar Weldment
	4	H1021	End Cap (3 required)
	5	L8008	Hole Cover Assembly (3 required)
	6	L8017	Applicator Drum
	7	L8020	Axle Shaft
	8	L8013	Fill Port Cover Assembly (Includes Code Nos. 15, 16, 17, 18, 20 & 21)
	9	L8012	Screw Knob (6 required)
	10	L8026	Screw 1/4-20 x 1 1/2" (2 required)
	11	L8027	Screw 1/4-20 x 1 1/7" (6 required)
	12	L8028	Spacer Bar
	13	X120	O-Ring (2 required)
	14	L8032	Screw (2 required)
	15	F2519A	Retainer Washer (2 required)
	16	W529	Washer (2 required)
	17	L8030	Screw Knob (2 required)
	18	L8031	Vinyl Cap (2 required)
	19	L8033	Axle Shaft-Short
	20	L5003	Washer (4 required)
	21	L8016	Fill Port Cover Gasket